


Blow Mold Nose Cone
20308

ASSEMBLY INSTRUCTIONS

TOOLS YOU'LL NEED TO ASSEMBLE THIS ROCKET

Tube Type Plastic Cement

Hobby Knife

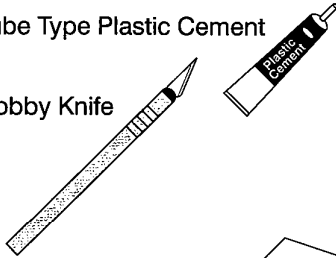

Body Tube
11418

Motor Housing
20612/20613

Fin
20855 (4)

Gray Motor Mount Tube
10301


Fin Locking Ring
20023

Motor Lock Ring
20024

PARTS NOT TO SCALE

White Shock Cord
50011

Yellow Shock Cord
50050

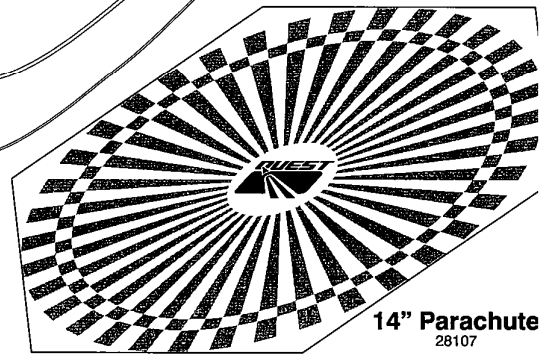


14" Parachute
28107




26" Shroud Lines
50100



Gripper Tabs
50101



Decal Sheet
3-01620-1030

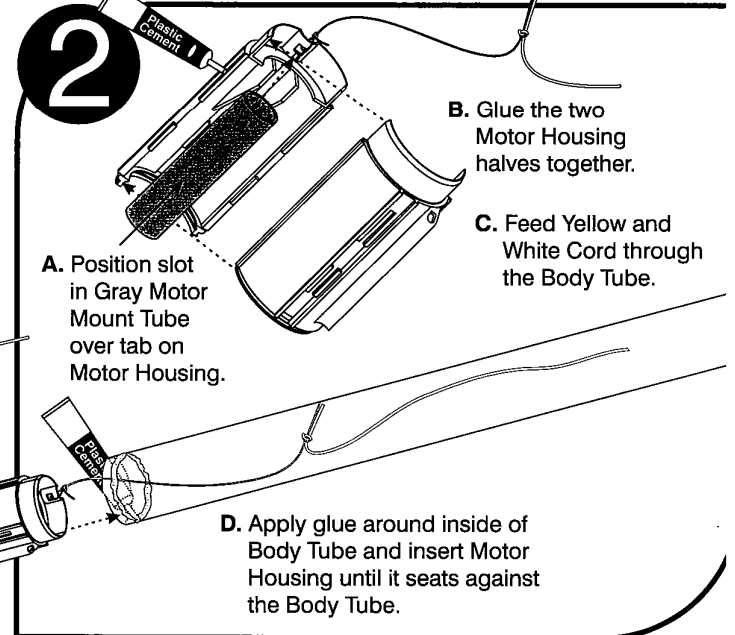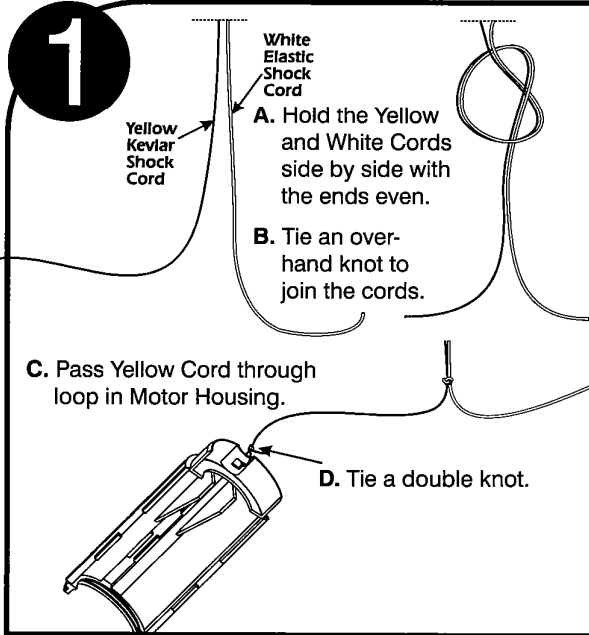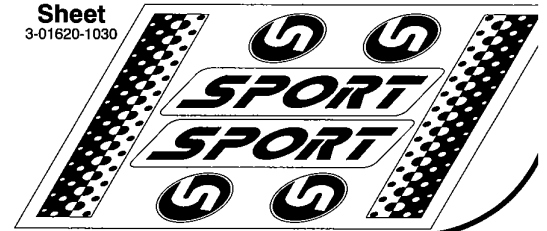

3

A. Test fit all four Fins into the slots.

B. Remove each one, add glue and replace.

C. Twist Fin Locking Ring onto rear of Motor Housing.

Check Fin alignment

4

A. Tie White Cord to Nose Cone with a double knot.

5

A. Place one Gripper Tab on each of the six corners on Parachute.

B. Firmly squeeze each Gripper to the Parachute with your fingers.

C. Tie Shroud Line with a double knot.

D. Attach Parachute to eyelet in Nose Cone.

6

A. Grab Parachute at center - pull gently.

B. Fold.

C. Roll.

D. Insert rolled Parachute, then Shock Cord and slide Payload section in place.

PARACHUTE MUST SLIDE EASILY INTO THE TUBE.

7

A. Remove the self-adhesive decals one at a time.

B. Position on rocket.

C. Rub gently.